

Productivity Series

Drum Bunny - Weigh and Roll Scale

Innovative Weighing and Moving


Drum Bunny is a mobile weighing solution that is ideal for applications that require frequent assessment for accurate filling/inventory and movement from one location to another. With Drum Bunny, you simply place the drum or container on the weighing platform to weigh it while enjoying the added efficiency of moving it to its desired location. The unique, low profile platform and three load cell design of the Drum Bunny allows it to adapt to uneven floors without needing to unload/reset/reload. The design also provides superior accuracy, avoids the time-consuming setup of traditional four-point scales, and eliminates the need for repeated calibration.



DRUM BUNNY - WEIGH AND ROLL SCALE

Features:

- Portable digital indicator included in the package
- Rechargeable power supply/USB micro universal connection
- Folding handle for shipping
- T-handle and rubber grips
- Uses EXP Indicator of choice (7400, 7500, 7600 models)
- Ships pre-calibrated and ready for use
- Mild steel/powder coated finish
- Load cells: (3) environmentally sealed
- (2) fixed and (1) heavy duty swivel caster with lock
- Designed to be moved with or without load in place
- Two Year Limited Warranty
- Made in USA

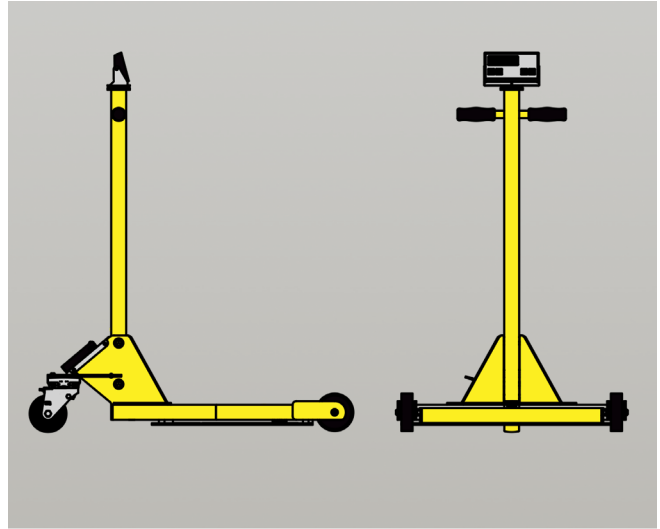

Model M6300-24R-1K

Capacity:

1000 x 0.2 lbs.

Platform:

24" diameter

Options (subject to availability)"

- Stainless steel construction
- Custom platform sizes and commodity holders
- 'LIVE' safety post for safety
- Non-portable model M6300-24R-1K NP
- Setpoints, wireless communication, other indicators
- Custom caster/wheel options per application

Warranty:

The parts and components of these Pennsylvania Scale Company products are warranted for four years from the date of retail delivery against defects in materials and workmanship, subject to the terms and conditions of our standard warranty.

